

## ORDINARY WORK PROCEDURE

## DIAPHRAGM PUMP CLEANING



**CODICE: ECOPWO-009-EN-R20.0**

WRITTEN IN ENGLISH



Note: this procedure, provided free of charge, can be changed by Ecoteam at any time without giving information or disclosure, so you are asked to check and possibly download the latest version.

**ASSUMPTION:**

This procedure is intended to provide information on diaphragm pump cleaning.

It remains the obligation of the D.L. risk assessment

**FIELD OF APPLICATION**

General equipment

**CONTACT THE ASSISTANCE SERVICE**

<b>Manufacturer</b>	<b>Ecoteam S.p.A.</b>
<b>Adress</b>	<b>Via del Padule, 23/F 50018 Scandicci – Firenze – ITALIA</b>
<b>P.IVA</b>	<b>03984330484</b>
<b>Phone</b>	<b>+39 055 73 555</b>
<b>Fax</b>	<b>+39 055 73 55 55 00</b>
<b>Internet web side</b>	<b><a href="http://www.ecoteam.it">www.ecoteam.it</a></b>
<b>E-mail</b>	<b><a href="mailto:info@ecoteam.it">info@ecoteam.it</a></b>
<b>PEC</b>	<b><a href="mailto:ecoteamspa@legalmail.it">ecoteamspa@legalmail.it</a></b>

Tabella 1 “ECOTEAM spa - info”

## REVISION LIST

Revisione	Data	Note
20.0	1/1/2020	

Tabella 2 "Revision List"

## DISTRIBUTION LIST

Name	Job	Date	Signature

Tabella 3 "Distribution list"

**SUGGESTED SPECIAL TOOLS**

**Means of access**

--	--




**DIAPHRAGM PUMP CLEANING**



1. Record the pump performance
2. Remove the compressed air power supply.

3. Close manual valves
4. Drain the pump and disposal the waste.
5. Disconnect hydraulic connections
6. Follow the specific instructions to clean the pump and its internal parts
7. Connect hydraulic connections
8. Open the manual valves
9. Verify the connections
10. Turn on the pump and remove the air present inside the pump
11. Verify the pump performance

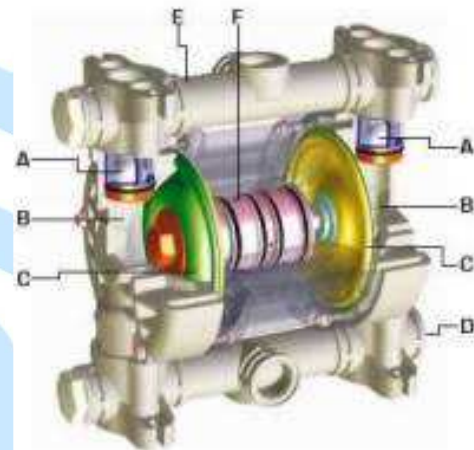

12. Clean the work area

**Technical note:**

**If the cleaning operation is frequent, it is necessary to check the reasons.**



**DANGER: pollution**

Dispose waste according to local regulations